


Fly6™


Watching your back.

QUICK START GUIDE

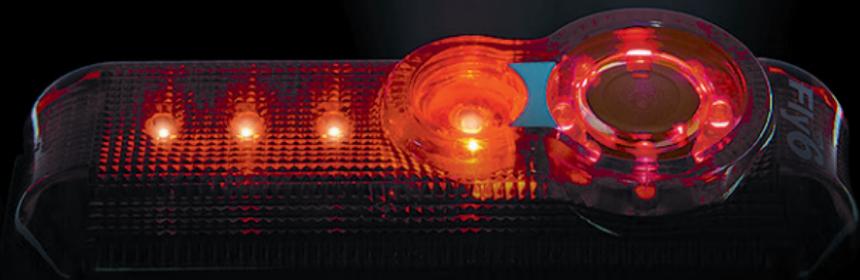

www.fly6.com

STEP 1 / Connect & Charge

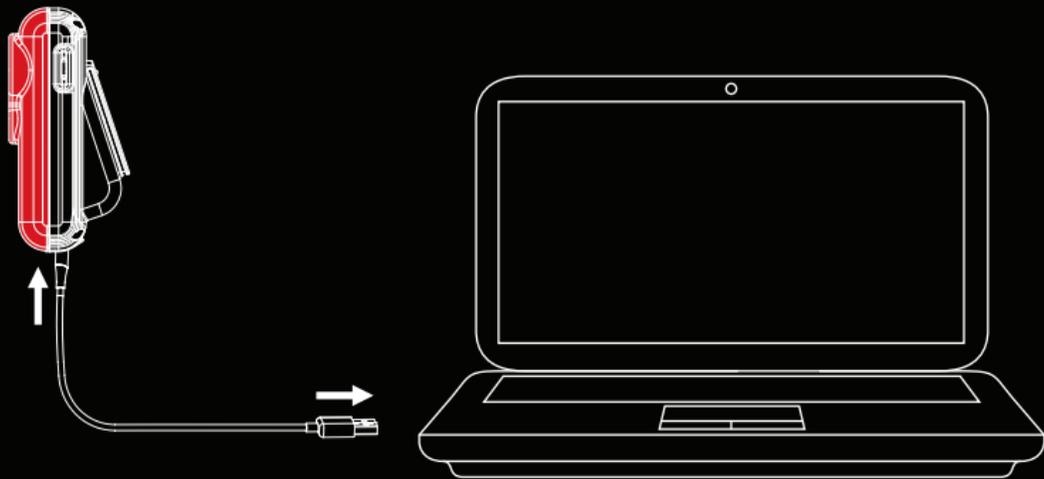

- With supplied USB cable connect your Fly6 to a PC or Mac. Middle LED will light until charged

STEP 2 / Setting the date and time

Power button



- While maintaining the connection to your computer, turn on your Fly6 (depress power for 2 seconds) to access the file directory




STEP 2 / Setting the date and time

- Open folder containing "CONFIG.TXT" using text editor
- Modify date and time to suit, in the following format:
YYYY/MM/DD HH:MM
- Save the file in the root or main directory (not in the same folder)
- Remove your Fly6 from computer - the settings are now saved
- Turn on to have the new settings take effect

STEP 3 / Attaching Fly6 to your bike


- Snap seat post mount onto device

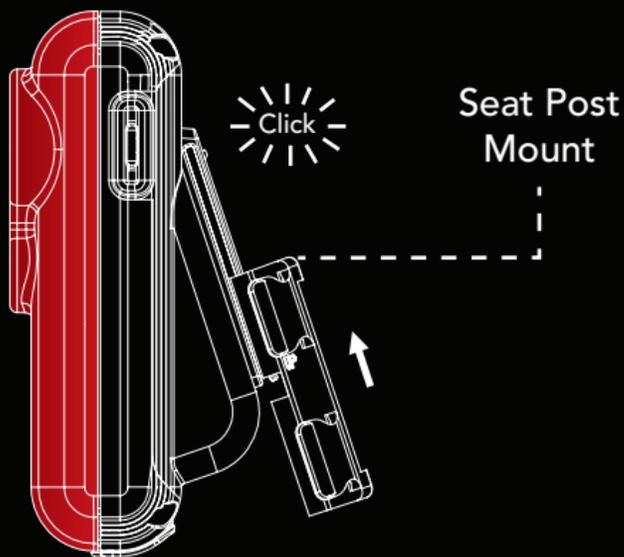


STEP 3 / Attaching Fly6 to your bike

- Take selection of provided alignment spacers and select the appropriate one, so that your Fly6 sits perpendicular to the ground


Flat

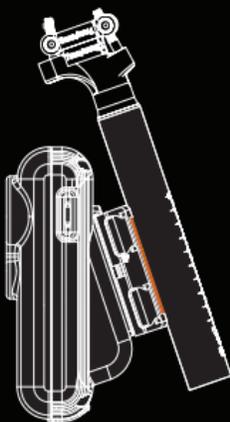

5°

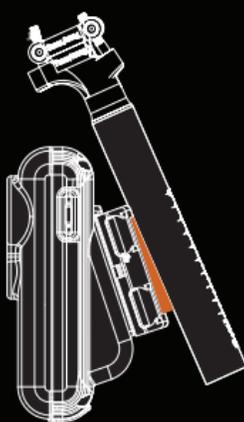


10°

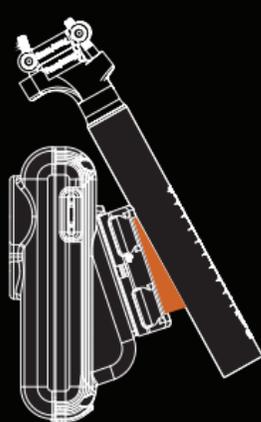


STEP 3 / Attaching Fly6 to your bike

- Once selected, peel off adhesive backing and affix to seat post mount

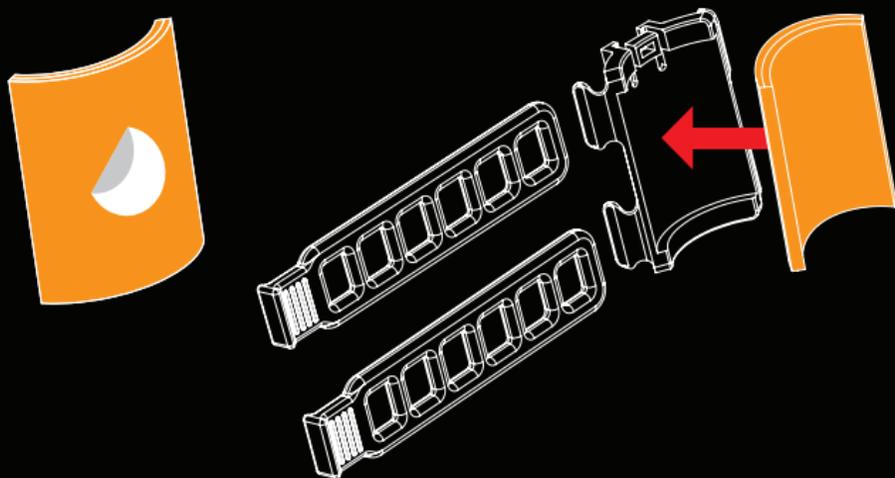


STEP 3 / Attaching Fly6 to your bike

- Now attach straps to seat post mount

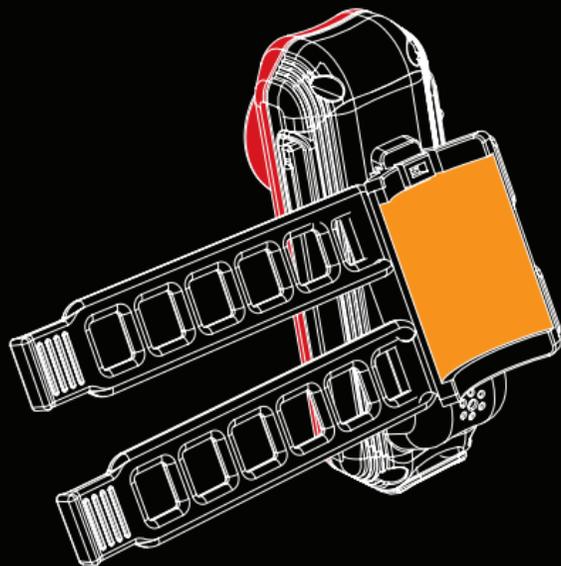


STEP 3 / Attaching Fly6 to your bike

- Next, hold against seat post (for aero seat posts, place aero spacer on post first and use longer straps)

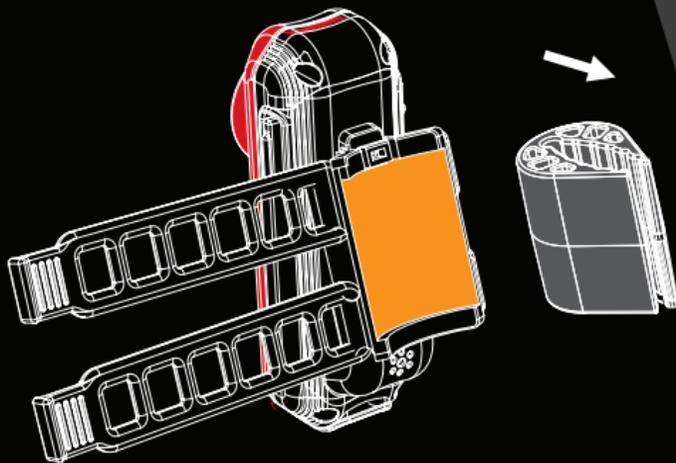

STEP 3 / Attaching Fly6 to your bike

- Wrap straps around seat post and affix clasps to hooks

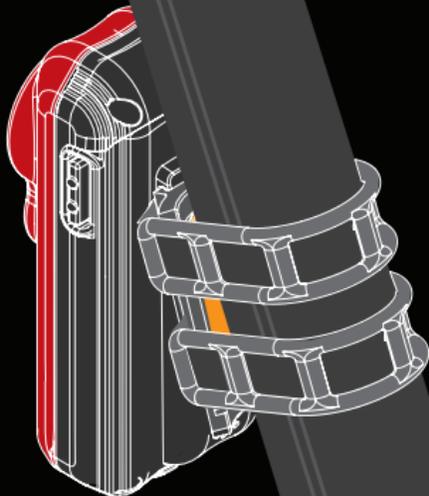

STEP 4 / Operating your Fly6

Important: Before operating, ensure the USB cover is firmly depressed and seated fully

- Power button
 - Turn On/Off (depress for 2 seconds)
 - Toggle through flashing sequences (depress briefly)
- Courtesy dimmer (high at start up)
 - Press once for low
 - Press twice for no LED's, only camera (note: the camera's rotating bezel LED's are always on when camera is recording)
 - Press three times for super bright

Power button

Camera LEDs will begin to light in a clockwise rotary motion, indicating that the camera is operational.


Device will beep four (4) times to indicate full battery.




Courtesy Dimmer

Use to brighten or dim the device's output of light.

To view your footage, Team Fly6 recommends you download and use VLC Media Player (www.videolan.org) for both Mac & Windows

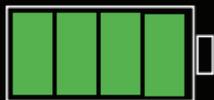

4 Beeps
75%+
Charged

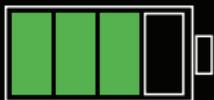

3 Beeps
50%+
Charged



2 Beeps:
25%+
Charged



1 Beep:
5%+
Charged



3 Beeps
Under 5%
Charged

NOTE: Should the battery deplete beyond 5% during operation, 3 long beeps will sound, audio and video function will turn off, and light will continue to operate with remaining power (approx. 1.5 hours).

For additional instructions, visit www.fly6.com to download a complete instruction manual.

www.fly6.com

Fly6™

Watching your back.
